



## **PROGRAMMING YOUR FIBERTV REMOTE CONTROL TO YOUR TELEVISION**

1. Manually turn on TV

**NOTE: Please read steps 2 through 5 completely before proceeding. Highlight or write down the codes of the device you wish to program before moving on to step 2.**

2. On the remote control, press a device key once (i.e., TV,); it will blink once.
3. Press and hold SETUP until the selected mode key blinks twice, then release SETUP.
4. Use the "Setup Codes For Television" & locate the brand name and then enter the first four-digit code for your device. If performed correctly, the selected mode key will blink twice.

**NOTE: If the selected mode key emits a long blink, the entry is invalid.  
Repeat steps 2 through 4 and try entering the same code again.**

5. Aim the remote control at the device and press POWER once.  
The device should turn off. If it does not, repeat steps 2 through 4, trying each code for your brand until you find one that works.